




1 Forstmann Court
 Clifton, NJ 07011
 Phone: 973.772.6997
 Fax: 973.772.0747
 800.359.8561
info@commdevices.com
<http://www.commdevices.com>

Standard RJ45-DB9 Pinout
 9-6-00

RJ-45 DB-9 M/F

1 (Blue)	DSR(out)	6
2 (Orange)	CTS(out)	8
3 (Black)	GRD	5
4 (Red)	TX(in)	3
5 (Green)	RX(out)	2
6 (Yellow)	DCD(out)	1
7 (Brown)	RTS(in)	7
8 (Gray)	DTR(in)	4

out – signal is from UniGuard
in – signal from Host Equipment

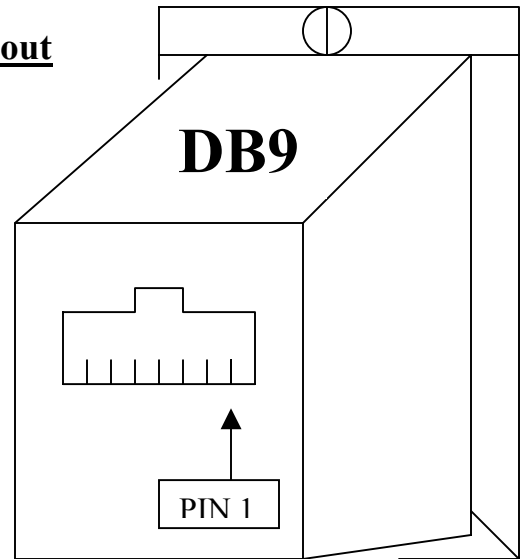

REAR VIEW
 OF
 CONNECTOR

Testing on the Continuity Tester

1. CONTINUITY TESTER IN A POSITION. LED # 4 SHOULD BE ON.
2. CONTINUITY TESTER IN B POSITION. LED # 3 SHOULD BE ON.
3. CONTINUITY TESTER IN C POSITION. LED #S 2,7 SHOULD BE ON.
4. CONTINUITY TESTER IN D POSITION. LED #S 5,8,20, SHOULD BE ON.