




1 Forstmann Court
 Clifton, NJ 07011
 Phone: 973.772.6997
 Fax: 973.772.0747
 800.359.8561
info@commdevices.com
<http://www.commdevices.com>

SunBox Connector Pinout
9-6-00

RJ-45 **DB-25Male**

1 (Blue)	DSR	6	←
2 (Orange)	CTS(out)	N/C	
3 (Black)	GRD	7	
4 (Red)	TX(out)	2	
5 (Green)	RX(in)	3	
6 (Yellow)	DCD(in)	8	
7 (Brown)	RTS(in)	4	
8 (Gray)	DTR(out)	20	
	CTS	5	←

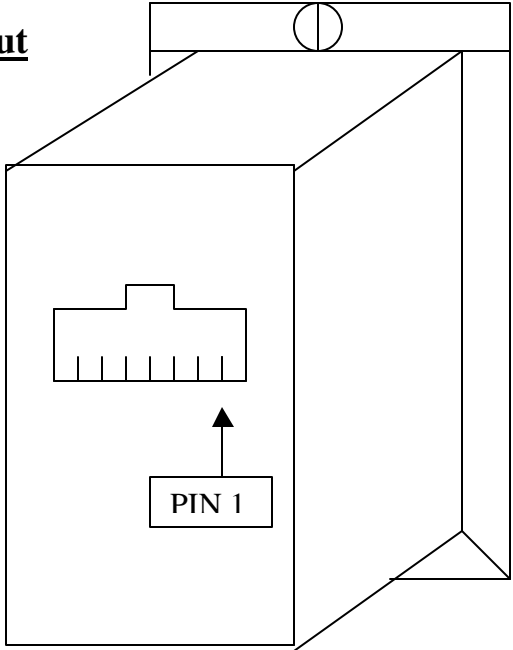

REAR VIEW
 OF
 CONNECTOR

out – signal is from UniGuard Jump 5&6
in – signal from Host Equipment Together

Testing on the Continuity Tester

1. CONTINUITY TESTER IN A POSITION. LED # 4 SHOULD BE ON.
2. CONTINUITY TESTER IN B POSITION. LED # 3 SHOULD BE ON.
3. CONTINUITY TESTER IN C POSITION. LED #S 2,7 SHOULD BE ON.
4. CONTINUITY TESTER IN D POSITION. LED #S 5,8,20, SHOULD BE ON.