




1 Forstmann Court
Clifton, NJ 07011
Phone: 973.772.6997
Fax: 973.772.0747
800.359.8561
info@commdevices.com
<http://www.commdevices.com>

Null Modem RJ45-DB9 Pinout
3-28-02

<u>RJ-45</u>		<u>DB-9 M/F</u>
1 (Blue)	DSR(out)	N/A
2 (Orange)	RTS(out)	7
3 (Black)	GRD	5
4 (Red)	RX(in)	2
5 (Green)	TX(out)	3
6 (Yellow)	DTR(out)	4
7 (Brown)	CTS(in)	8
8 (Gray)	DCD(in)	1

out – signal is from UniGuard
in – signal from Host Equipment

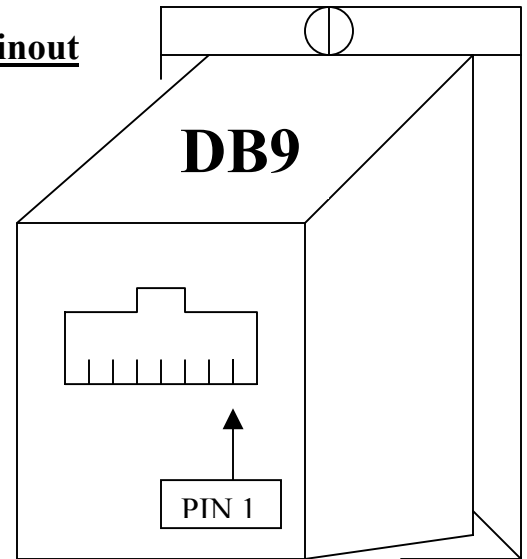

REAR VIEW
OF
CONNECTOR

Testing on the Continuity Tester

1. CONTINUITY TESTER IN A POSITION. LED # 4 SHOULD BE ON.
2. CONTINUITY TESTER IN B POSITION. LED # 3 SHOULD BE ON.
3. CONTINUITY TESTER IN C POSITION. LED #S 2,7 SHOULD BE ON.
4. CONTINUITY TESTER IN D POSITION. LED #S 5,8,20, SHOULD BE ON.