



1 Forstmann Court
 Clifton, NJ 07011
 Phone: 973.772.6997
 Fax: 973.772.0747
 800.359.8561
info@commdevices.com
<http://www.commdevices.com>


Null Modem DLO Connector Pinout
 3-28-02

RJ-45 **DB-25M/F**

1 (Blue)	DSR	N/C
2 (Orange)	RTS(out)	N/C ←
3 (Black)	GRD	7
4 (Red)	RX(in)	3
5 (Green)	TX(out)	2
6 (Yellow)	DTR(out)	N/C
7 (Brown)	CTS(in)	N/C ←
8 (Gray)	DCD(in)	N/C ←

out – signal is from UniGuard
in – signal from Host Equipment

Short 4,5, & 8
 Together

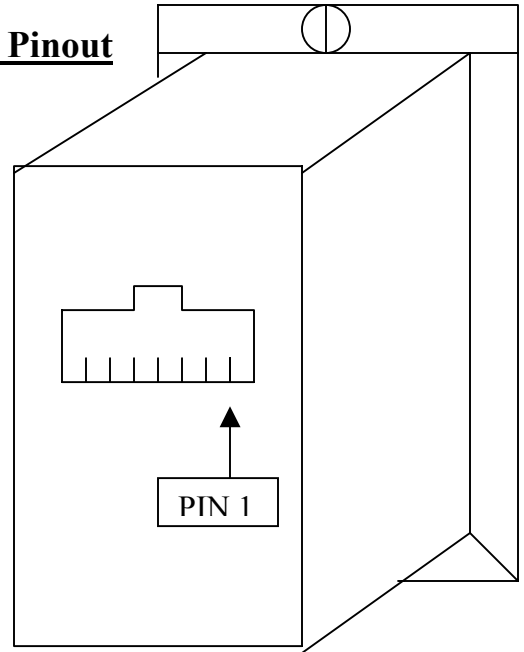

REAR VIEW
 OF
 CONNECTOR

Testing on the Continuity Tester

1. CONTINUITY TESTER IN A POSITION. LED # 4 SHOULD BE ON.
2. CONTINUITY TESTER IN B POSITION. LED # 3 SHOULD BE ON.
3. CONTINUITY TESTER IN C POSITION. LED #S 2,7 SHOULD BE ON.
4. CONTINUITY TESTER IN D POSITION. LED #S 5,8,20, SHOULD BE ON.